

# MAGELLAN™

## K32LCD - User Quick Reference Guide

The LCD will guide you with detailed messages.



Use the arrow keys to scroll the menu or options.




### AC Light

ON = Power on  
OFF = Power off

### StayD Light

ON = StayD on  
OFF = StayD off

### Keys

-  = Press once + **[MASTER CODE]** for Quick Menu programming
-  = Press & hold for keypad settings
-  = Press & hold for chime programming

## How to Arm (when StayD is OFF) †

### To Arm When Leaving...



#### To Regular Arm:

1. Close all zones in the desired partition.
2. Press **[ARM]**.
3. Enter your **[ACCESS CODE]**.

### To Arm When Staying...



#### To Stay Arm:

1. Press the **[STAY]** key.
2. Enter your **[ACCESS CODE]\***.

#### To Sleep Arm:

1. Press the **[SLEEP]** key.
2. Enter your **[ACCESS CODE]\***.

### To Disarm: **[OFF]** + **[ACCESS CODE]\***

\* Press button(s) corresponding to desired partition(s). For two partitions, press the other key after the confirmation beep.

† If StayD is ON, refer to the StayD User Card for more information.

## Trouble Display

The screen will display all troubles when they occur.

1. Press the **[TBL]** key. The trouble(s) will be displayed. Scroll through the trouble list using the **[▲]** and **[▼]** keys.
2. Read the corresponding explanation of the trouble from the trouble list in the User Guide. If no repair instructions are given, call your security company for repairs.
3. Press the **[CLEAR]** key to exit.

## Panic Keys

To send a silent or audible alarm to your security company, press and hold one of the key combinations listed below for two seconds.

Panic Alarm Type	Key Combinations
Police	Keys <b>[1]</b> and <b>[3]</b>
Medical	Keys <b>[4]</b> and <b>[6]</b>
Fire	Keys <b>[7]</b> and <b>[9]</b>

## How to Bypass Zones

Bypassed zones remained unarmed when the partition is armed.

1. Press the **[BYP]** key.
2. Enter your **[ACCESS CODE]**.
3. Select the zone(s) you want to bypass by entering the two-digit zone number (i.e. zone 3 = 03).
4. Press the **[ENTER]** key to save and exit.

## Alarm Memory Display

To view the alarms that occurred during the last armed period:

1. Disarm the system.
2. Press the **[MEM]** key.
3. The zones that were in alarm the last time the system was armed will be displayed.
4. Press the **[ENTER]** key to save and exit.

